

Seats Adjustment, Front Only , (Q1A),(Q1H),(3L4),(4V1)

From January 2011

**Audi**


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

Memory Seat/Steering Column Adjustment Control Module,
Driver Power Seat Adjustment Circuit Breaker 1


- J136 Memory Seat/Steering Column Adjustment Control Module
S44 Driver Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
S133 Safety Fuse 3
T12x 12-Pin Connector
T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
T32m 32-Pin Connector

- 34 Ground Connection Under Driver Seat
95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
371 Ground Connection 6 (in Main Wiring Harness)
B316 Positive Connection 2 (30a) (in Main Wiring Harness)
M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)
* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Comfort CAN Bus

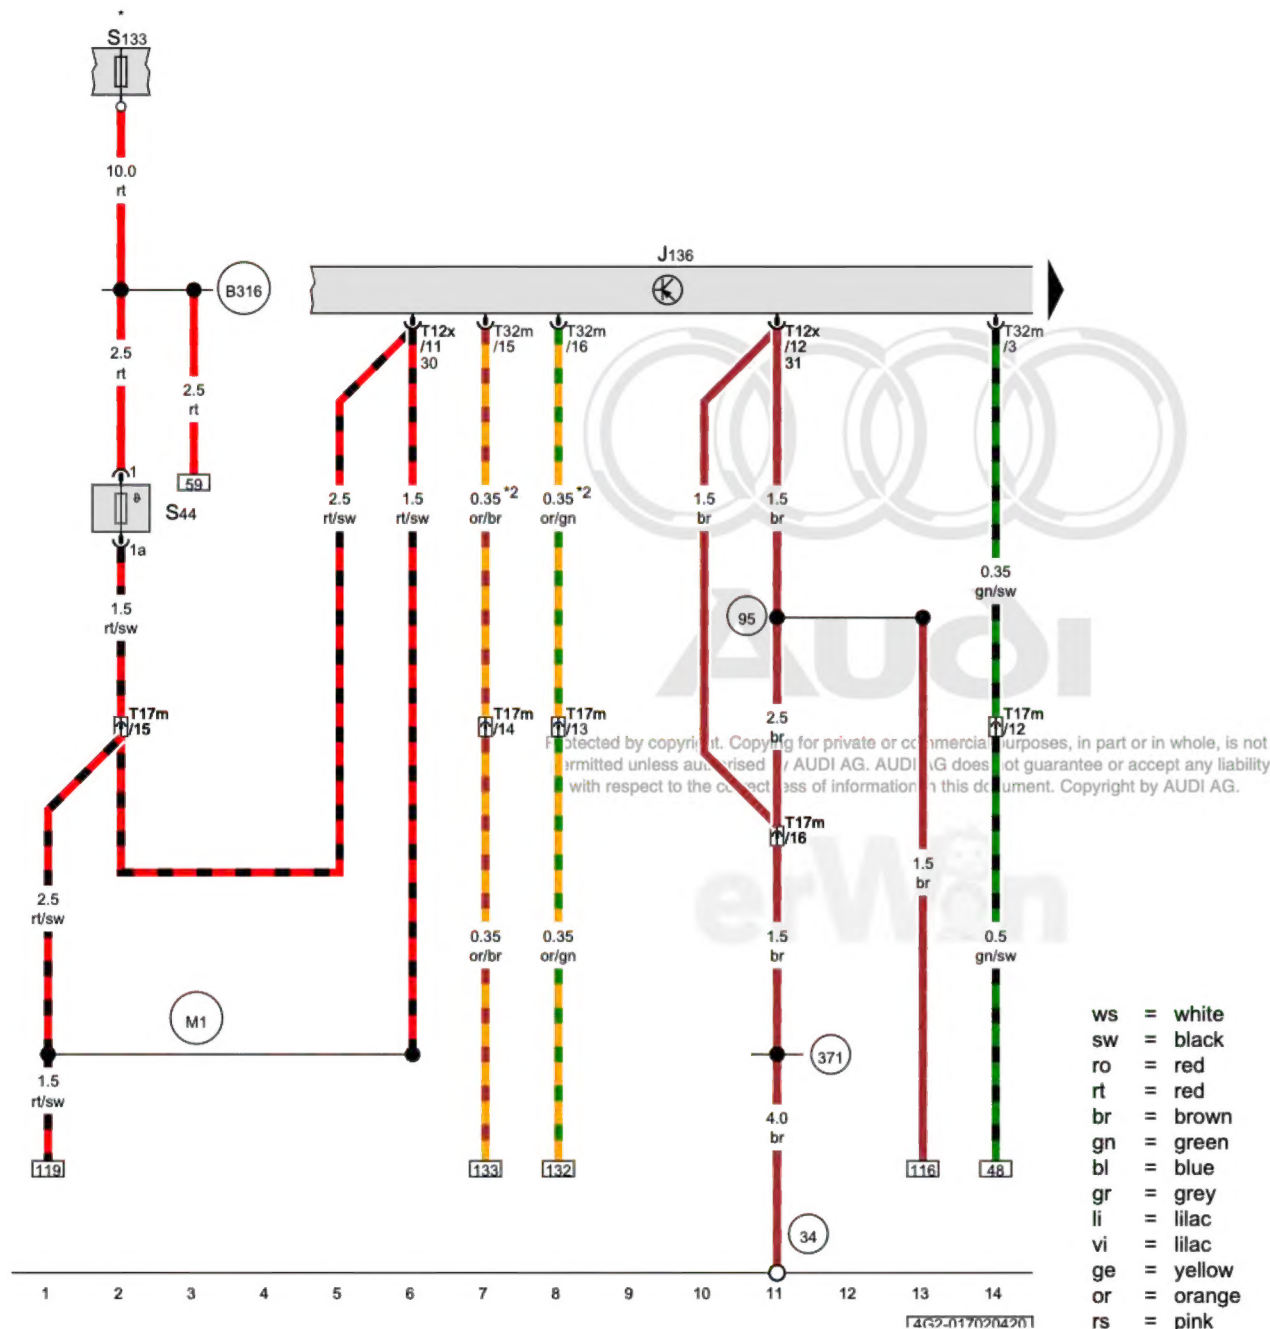

Memory Seat/Steering Column Adjustment Control Module,
Driver Seat Forward/Back Adjustment Motor, Driver
Backrest Adjustment Motor, Driver Seat Angle Adjustment
Motor, Driver Seat Height Adjustment Motor

J136	Memory Seat/Steering Column Adjustment Control Module
T4ce	4-Pin Connector
T4ci	4-Pin Connector
T4ck	4-Pin Connector
T4cl	4-Pin Connector
T8ad	8-Pin Connector, In the Driver Seat
T12x	12-Pin Connector
V28	Driver Seat Forward/Back Adjustment Motor
V45	Driver Backrest Adjustment Motor
V243	Driver Seat Angle Adjustment Motor
V245	Driver Seat Height Adjustment Motor
*	Running Change

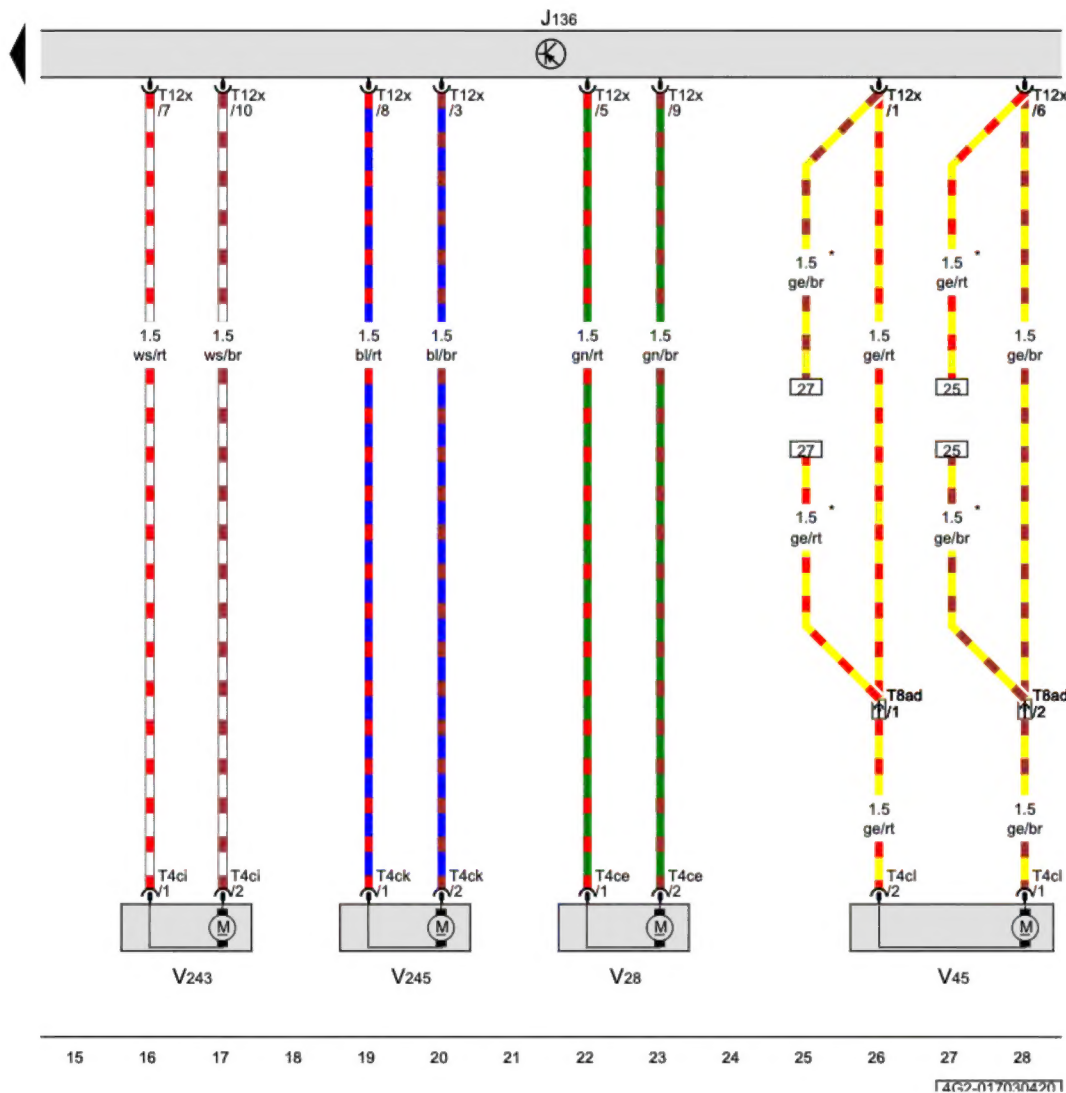

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	grey
li	=	lilac
vi	=	lilac
ge	=	yellow
or	=	orange
rs	=	pink

gr = grey
li = lilac
vi = violet


Driver Seat Adjustment Control Head, Memory Seat/
Steering Column Adjustment Control Module

- E96 Driver Backrest Adjustment Switch
- E222 Driver Seat Angle Adjustment Switch
- E363 Driver Seat Forward/Back Adjustment Switch
- E364 Driver Seat Height Adjustment Switch
- E470 Driver Seat Adjustment Control Head
- J136 Memory Seat/Steering Column Adjustment Control Module
- T12z 12-Pin Connector
- T32m 32-Pin Connector

412 Ground Connection 3 (in Seat Adjustment Wiring Harness)

* Running Change

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

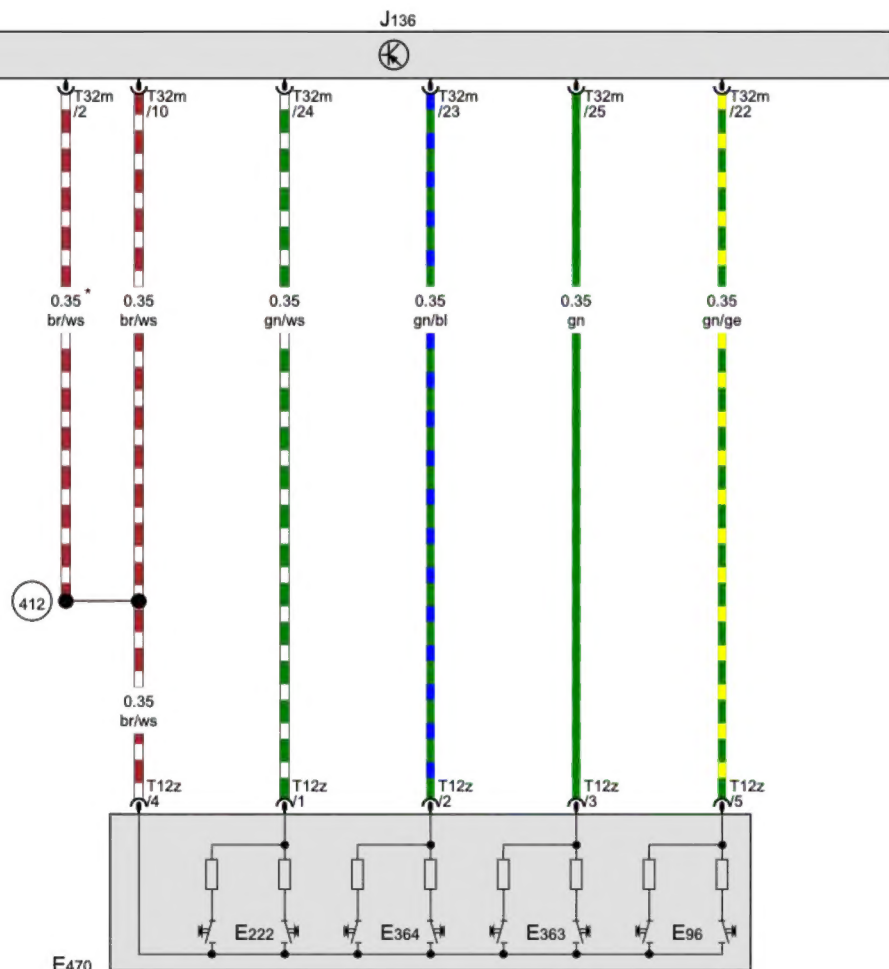

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Driver Memory Seat Control Head, Emergency Off Button, Driver Door Control Module

- E97 Driver Memory Seat Control Head
- E190 Emergency Off Button
- E283 Driver Seat Memory Button
- E338 Memory Seat Positions 1 and 2 Button
- J386 Driver Door Control Module
- T10o 10-Pin Connector
- T20e 20-Pin Connector
- T23a 23-Pin Connector, On the Left A-Pillar
- T27a 27-Pin Connector, On the Left A-Pillar
- T32k 32-Pin Connector

267 Ground Connection 2 (in Driver Door Wiring Harness)

R52 Connection 58S (in Driver Door Wiring Harness)

- * From June 2011
- *2 Data Bus Wire (CAN Bus)

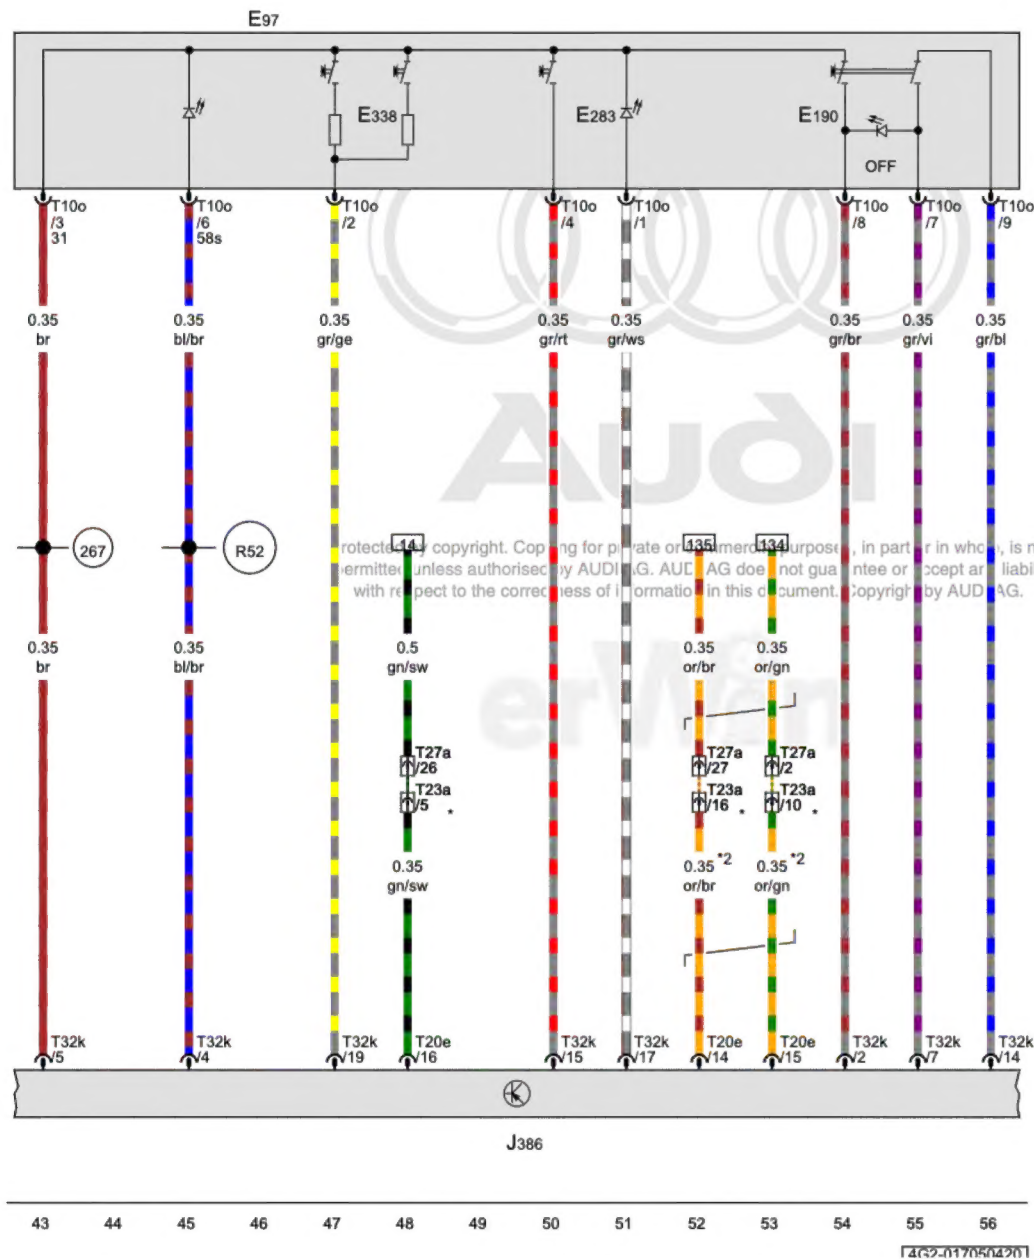


Front Passenger Memory Seat Control Module, Front Passenger Power Seat Adjustment Circuit Breaker 1

- J521 Front Passenger Memory Seat Control Module
- S46 Front Passenger Power Seat Adjustment Circuit Breaker 1, In the Left A-Pillar Connector Station
- S131 Safety Fuse 1
- T12aa 12-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T32n 32-Pin Connector

- 35 Ground Connection Under Front Passenger Seat
- 95 Ground Connection 1 (in Seat Adjustment Wiring Harness)
- 378 Ground Connection 13 (in Main Wiring Harness)
- B298 Positive Connection 2 (30) (in Main Wiring Harness)
- M1 Positive Connection 1 (30) (in Seat Adjustment Wiring Harness)


- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Comfort CAN Bus
- *3 From June 2014

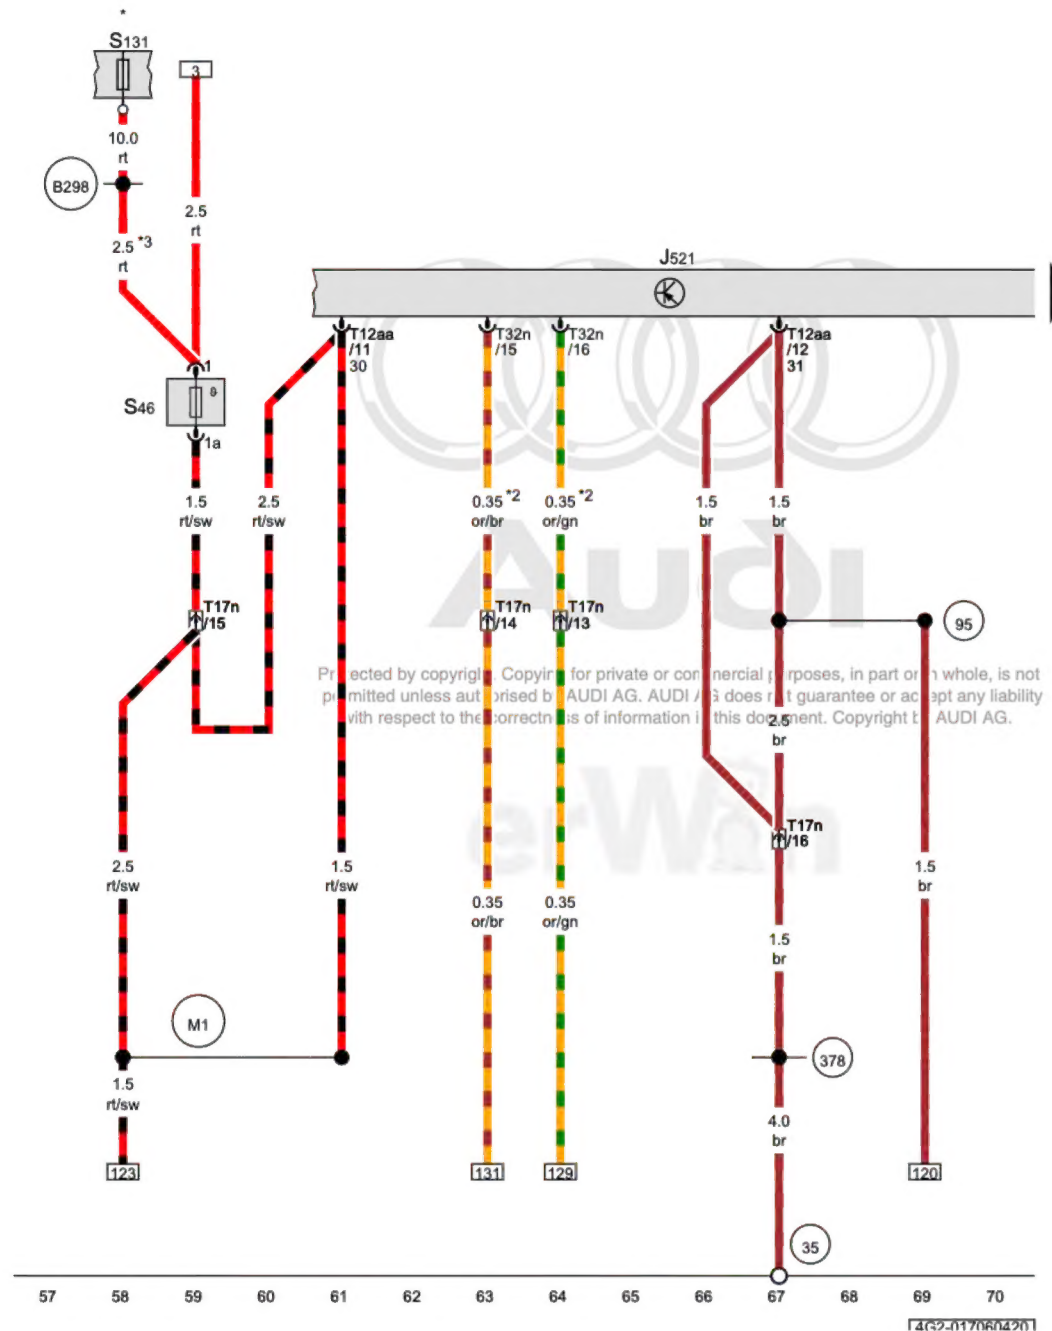

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Memory Seat Control Module, Front Passenger Seat Forward/Back Adjustment Motor, Front Passenger Backrest Adjustment Motor, Front Passenger Seat Angle Adjustment Motor, Front Passenger Seat Height Adjustment Motor

- J521 Front Passenger Memory Seat Control Module
- T4bl 4-Pin Connector
- T4cm 4-Pin Connector
- T4co 4-Pin Connector
- T4cp 4-Pin Connector
- T8ae 8-Pin Connector, In the Front Passenger Seat
- T12aa 12-Pin Connector
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T32n 32-Pin Connector
- V31 Front Passenger Seat Forward/Back Adjustment Motor
- V46 Front Passenger Backrest Adjustment Motor
- V244 Front Passenger Seat Angle Adjustment Motor
- V246 Front Passenger Seat Height Adjustment Motor

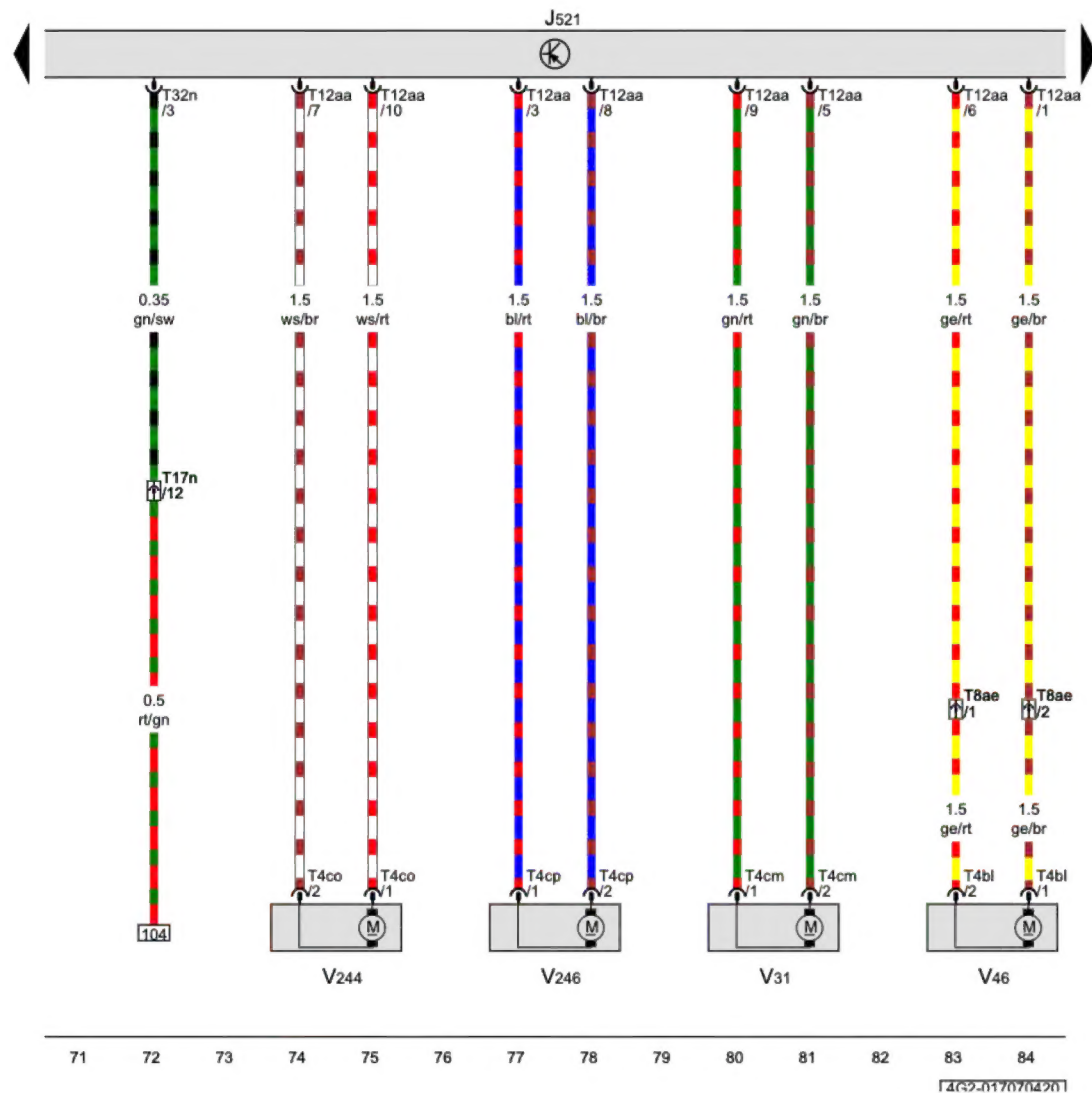


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Front Passenger Seat Adjustment Control Head, Front Passenger Memory Seat Control Module


- E64 Front Passenger Seat Forward/Back Adjustment Switch
- E98 Front Passenger Backrest Adjustment Switch
- E334 Front Passenger Seat Angle Adjustment Button
- E365 Front Passenger Seat Height Adjustment Switch
- E471 Front Passenger Seat Adjustment Control Head
- J521 Front Passenger Memory Seat Control Module
- T12ac 12-Pin Connector
- T32n 32-Pin Connector

413 Ground Connection 4 (in Seat Adjustment Wiring Harness)

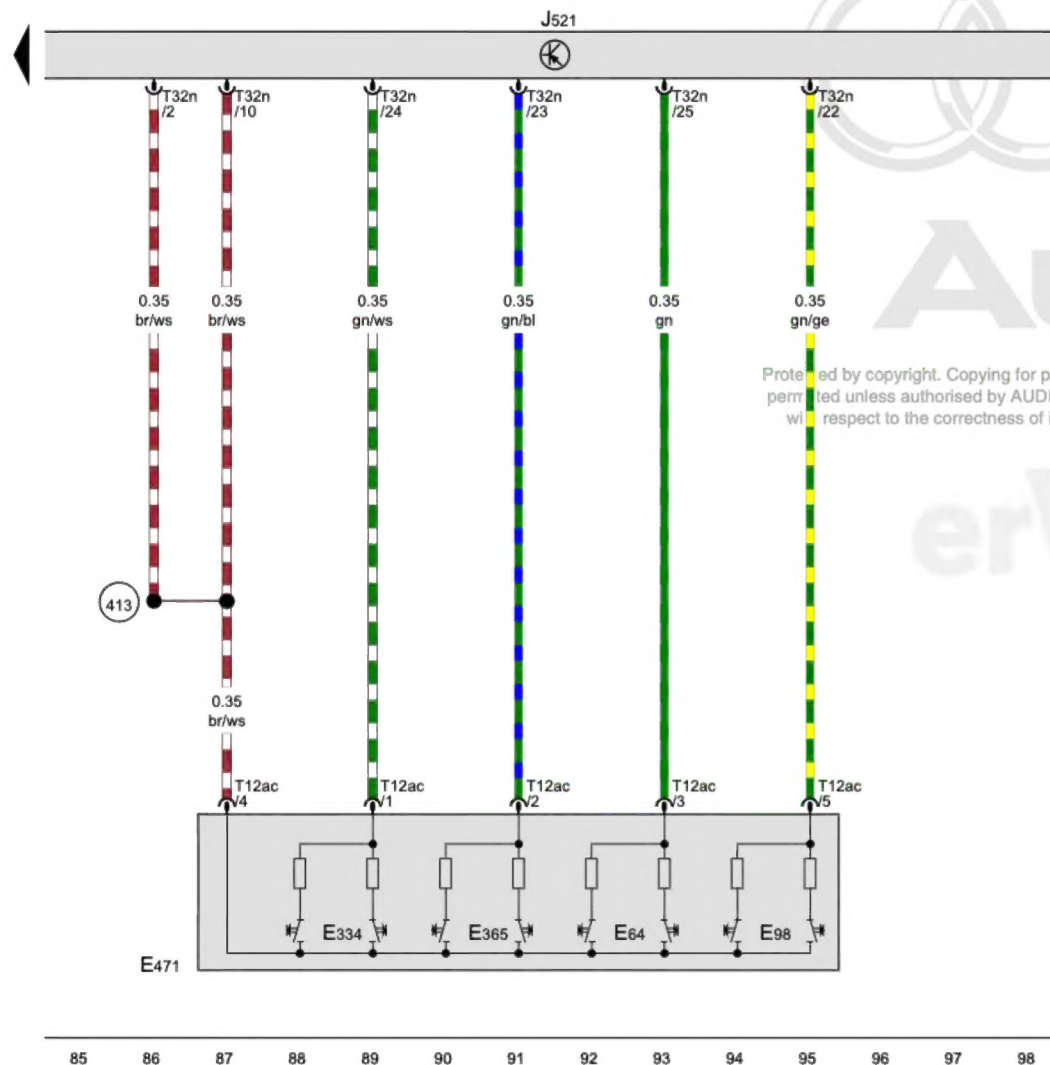

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Memory Seat Control Head, Passenger Side Emergency -Off- Button, Front Passenger Door Control Module

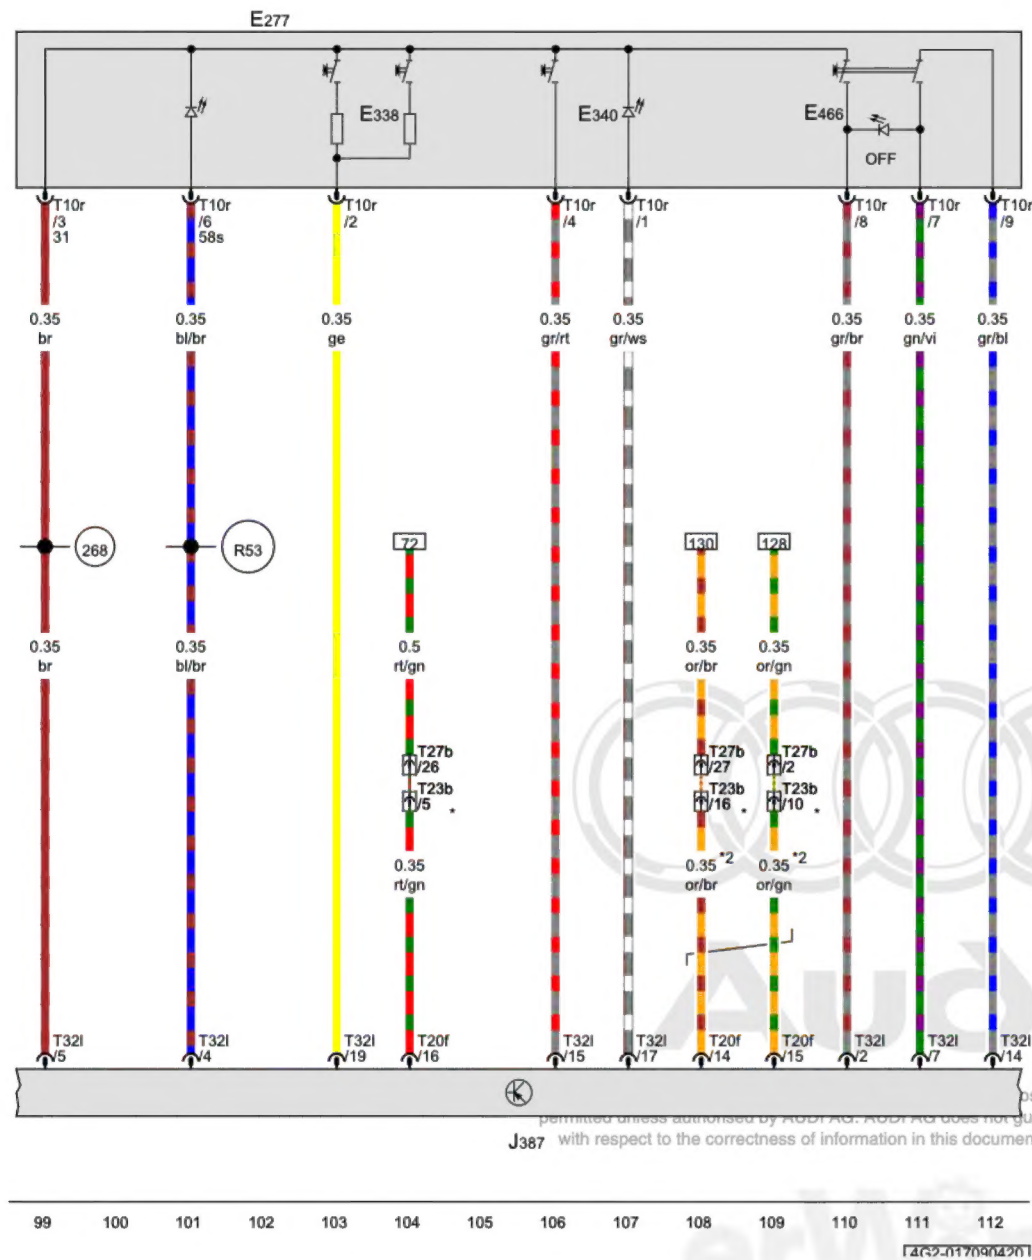

- E277 Front Passenger Memory Seat Control Head
- E338 Memory Seat Positions 1 and 2 Button
- E340 Front Passenger Memory Seat Button
- E466 Passenger Side Emergency -Off- Button
- J387 Front Passenger Door Control Module
- T10r 10-Pin Connector
- T20f 20-Pin Connector
- T23b 23-Pin Connector, On the Right A-Pillar
- T27b 27-Pin Connector, On the Right A-Pillar
- T32l 32-Pin Connector


268 Ground Connection 2 (in Front Passenger Door Wiring Harness)

R53 Connection 58S (in Front Passenger Door Wiring Harness)

* From June 2011

*2 Data Bus Wire (CAN Bus)

Driver Seat Lumbar Support Adjustment Switch, Front
Passenger Seat Lumbar Support Adjustment Switch

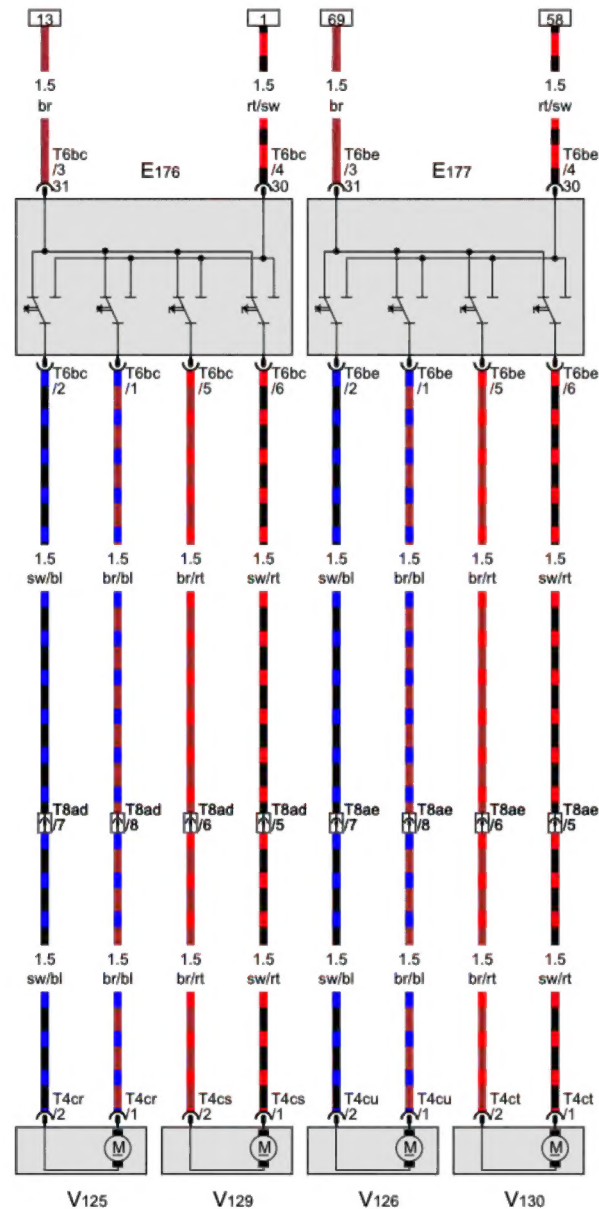


- E176 Driver Seat Lumbar Support Adjustment Switch
- E177 Front Passenger Seat Lumbar Support Adjustment Switch
- T4cr 4-Pin Connector
- T4cs 4-Pin Connector
- T4ct 4-Pin Connector
- T4cu 4-Pin Connector
- T6bc 6-Pin Connector
- T6be 6-Pin Connector
- T8ad 8-Pin Connector, In the Driver Seat
- T8ae 8-Pin Connector, In the Front Passenger Seat
- V125 Driver Seat Lumbar Support Curvature Adjustment Motor
- V126 Front Passenger Seat Lumbar Support Curvature Adjustment Motor
- V129 Driver Seat Lumbar Support Height Adjustment Motor
- V130 Front Passenger Seat Lumbar Support Height Adjustment Motor

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Data Bus on Board Diagnostic Interface, Comfort System
CAN Bus High Wire Junction, Comfort System CAN Bus
Low Wire Junction, Comfort System CAN Bus Low Wire
Junction 2

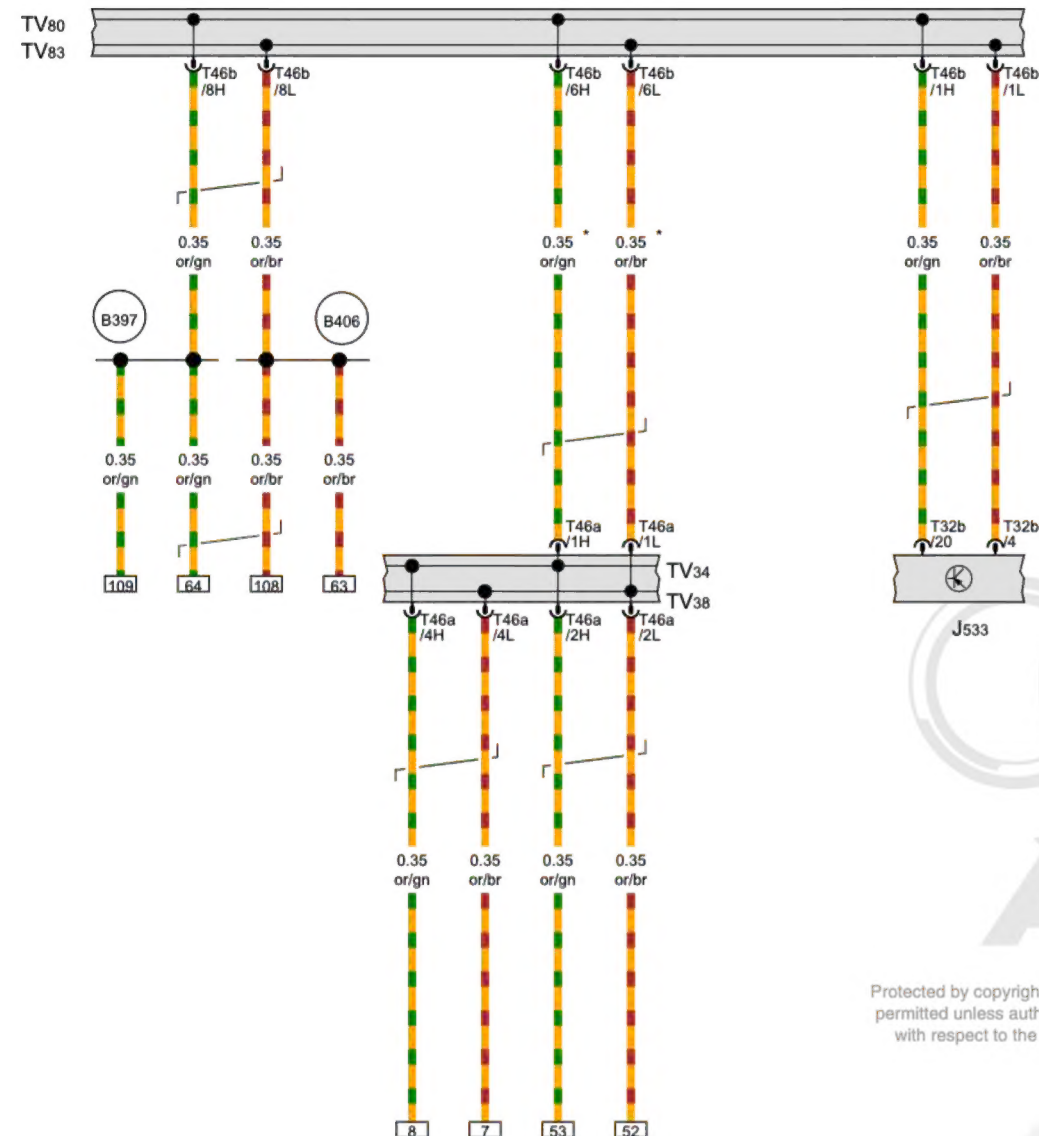

- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2
- B397 Comfort System CAN Bus High Connection 1 (in Main Wiring Harness)
- B406 Comfort System CAN Bus Low Connection 1 (in Main Wiring Harness)
- * Data Bus Wire (CAN Bus)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

127 128 129 130 131 132 133 134 135 136 137 138 139 140

127 128 129 130 131 132 133 134 135 136 137 138 139 140